

NH2600SE Quick Reference Guide

1 ATM Power On/Off



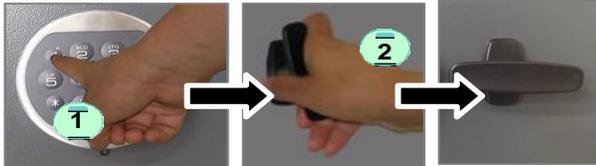
» ATM Power On

- Open the upper front door.
- Press Power Switch in the direction of "I".

» ATM Power Off

- Press Power Switch in the direction of "O".

2 Security Door Open



» Security Door Open

- Turn the key clockwise to open the security cover.
- The default password of electronic lock is 1-2-3-4-5-6.
- Enter this sequence on the electronic lock keypad. (①).
- The lock will confirm a valid combination entry with a double signal. Lock will signal three (3) times for invalid combination entry.
- Turn the vault door handle counterclockwise. (②)
The vault door will open.

3 Opening the Exterior Door

- Opening the upper front body door,
 - Insert the key and turn it clockwise. (①)
 - Pull the front panel outward. (②)



3-1

- Opening the lower front body door,
 - Open the security cover with key. (③)
 - Unlock the e-lock and open security door. (④)



3-2

4 Cash Replenishment

Caution: The acceptable condition bills should be loaded (Refer to Operator Manual)

- Enter to Supervisor mode (Refer to "9 OP Main Screen")
- Select "SETTLEMENT"
- Submit "TRIAL CASSETTE TOTAL" to show note count.
 - * To show note count and to clear note count, submit "CASSETTE TOTAL"
- How to add note count,
 - Select "SETTLEMENT"
 - Select "ADD CASH"
 - Select the cassette to be added the notes(①)
 - Enter the note count and then press ENTER key in PIN Pad. (If you want to add the cash for other cassette, repeat from "①")
 - After completing, press "APPLY" button.

4-1

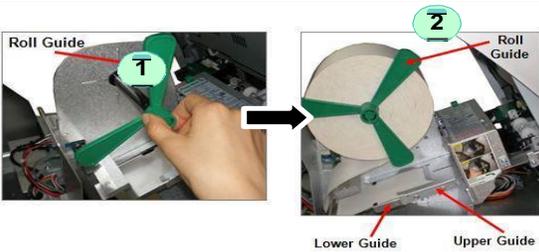
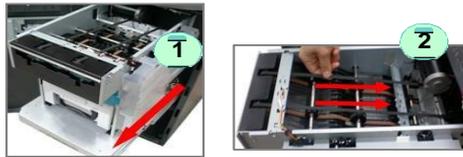
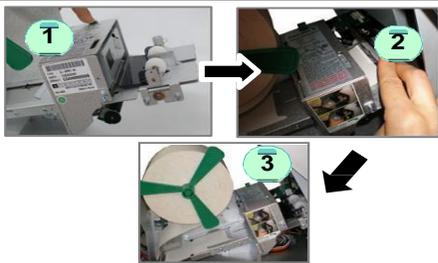
- Open the security door. (Refer to "3 Opening the Exterior Door")
- Pull out the cash cassette carefully.
- Unlock the cassette cover using key (①).
- Pull the push plate back until it is locked against the push plate latch. (②) And then, set the bills into the cash cassette.
- Then, release the push plate from the cash plate latch and allow it gradually to take up its position behind the notes. (③)
- Close the cassette cover with key, place it carefully on the set guide and push it in until it is locked in place.

4-2



* The above description is based on 1000 new note capacity cassette. For 2000 new note capacity cassette, refer to operator manual.

NH2600SE Quick Reference Guide

5	Receipt Paper Replenishment	Caution: The acceptable condition papers should be loaded (Refer to Operator Manual)
5-1	 <p style="text-align: center;">Lower Guide Upper Guide</p>	5-2
		<ul style="list-style-type: none"> ● Open the upper front door with key. (Refer to “3 Opening the Exterior Door”) ● Remove the roll guide by pulling it off (①). ● Add the receipt paper into the rod and then insert the roll guide tightly again to fix it. (②). ● Insert the leading edge of paper between lower guide and upper guide of printer slowly until paper is going to start feeding. (②)
6	Note Jam	Caution: Before removing jam, power off for your safety.
6-1	<ul style="list-style-type: none"> ● Enter to “OP Main” screen, and submit “CLEAR” button (Refer to “8 Device Reset”) ● If jam is not cleared, power off ● Open the security door. (Refer to “3 Opening the Exterior Door”) ● Pull out the cash dispenser (①). ● Move the belt by turning the knob beside cash dispenser to move jammed note into a well removed position. (②) ● Remove jammed note carefully and power on. 	6-2
		<ul style="list-style-type: none"> * Be sure to check if the belt is positioned correctly after removing the jammed bills.  <ul style="list-style-type: none"> * The above description is based on CDU with 1000 new note capacity cassette. For CDU with 2000 new note capacity cassette, refer to operator manual.
7	Receipt Paper Jam	
7-1		7-2
		<ul style="list-style-type: none"> ● Open the upper front door with key. (Refer to “3 Opening the Exterior Door”) ● To remove a jam inside transport path, press down the button to release the lower roller assembly (①). ● To take out a jam in front of transport path, lift up the transparent window guide. (②) ● After finishing clearing the jam, load the receipt paper properly. (③).
8	Device Reset	
		<ul style="list-style-type: none"> ● To reset each device with error of ATM, enter to “OP Main” screen, and press “CLEAR” key of EPP.
9	OP Main Screen	
		<ul style="list-style-type: none"> ● To enter to Supervisor mode, press ENTER, CLEAR, CANCEL, 1, 2 and 3 keys in order. (Default Password: “555555” and it is changeable in Supervisor mode.) (①) ● If correct password is entered, “OPERATION FUNCTION” menu will be displayed. (②) <p>* Pressing CLEAR key erases the entered number and pressing CANCEL key goes to in-service-mode.</p>
Contact Information		